



SAM Junction Box Connection & Polarity (ZJRH junction box)

For all of CNPV modules, the left side cable of J-box is positive and right for negative, **with J-box lid facing you and cable on the top side (box on the bottom side - see picture below).**

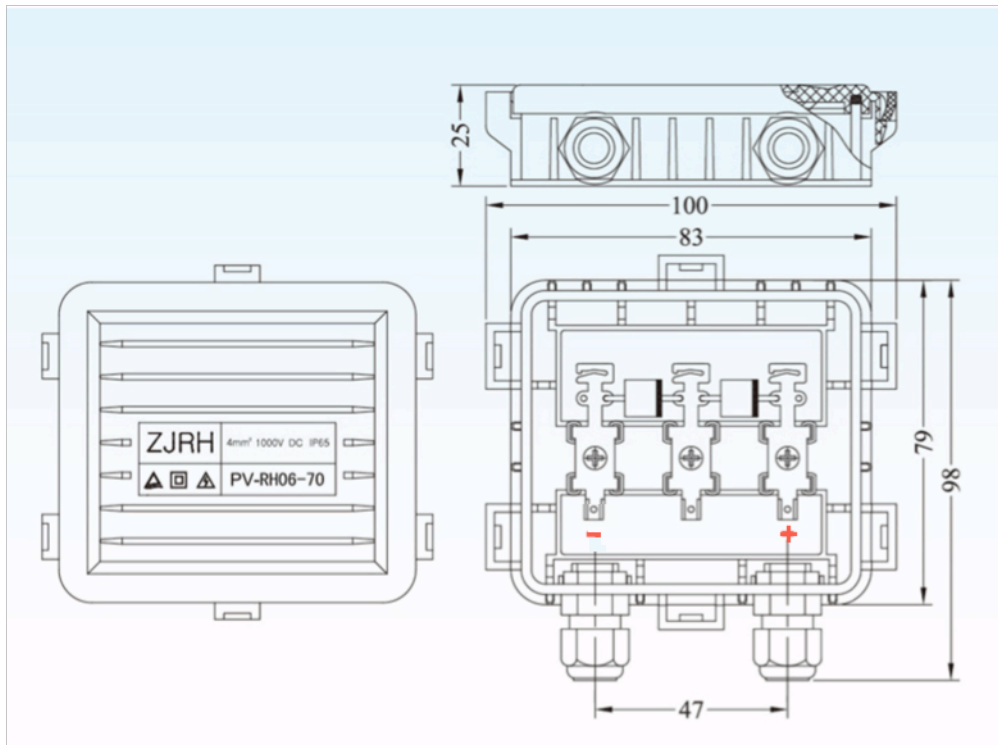

Connection points

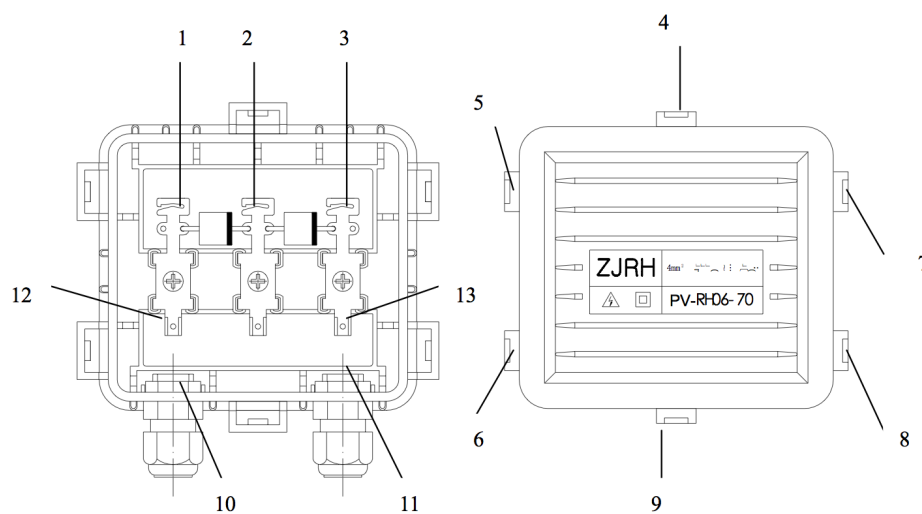

1,2,3 from laminate (manufacturer access only)

12 +ve, 13 -ve to load (user access)

4,5,6,7,8 and 9 to open and close junction box lid, use screw driver (user access)